

**eikon® e4s**

# Installation and Operating Instructions

**eikon®**  
easy  
TOUCH

## IMPORTANT INFORMATION READ BEFORE USE

Users are cautioned that maintenance and repairs should be performed by a Merrychef® authorized service agent using genuine Merrychef® replacement parts. Merrychef® will have no obligation with respect to any product that has been improperly installed, adjusted, operated or not maintained in accordance with national and local codes or installation instructions provided with the product, or any product that has its serial number defaced, obliterated or removed, or which has been modified or repaired using unauthorized parts or by unauthorized service agents. For a list of authorized service agents, please refer to the back page of this booklet. The information contained herein (including design and parts specifications) may be superseded and is subject to change without notice.

# INTRODUCTION

Merrychef® eikon® ovens offer operators the flexibility of combination cooking with additional control over fan speed and microwave power.


Combination cooking enables high quality results to be achieved in a fraction of the time taken by conventional cooking, particularly when baking, browning, roasting and grilling dishes.

Once established, precise instructions for combination or convection cooking of selected items may be programmed into the oven's memory so that they can be repeated easily and accurately. Up to 1024 programs can be stored and simply recalled.

## Multistage Programming

The oven controls offer even greater flexibility by allowing multistage programming. This enables the exact conditions required for quality results to be set according to the food type.

A single cooking program can have up to 6 stages, each stage controlled with its own time, fan speed and microwave power settings (model dependent).

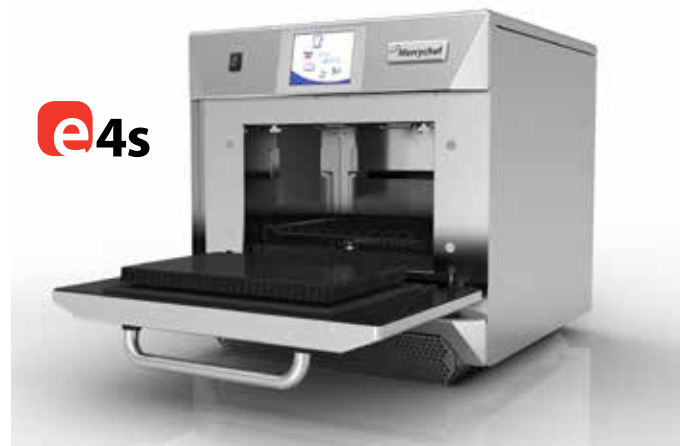

*The words 'double click' and 'click' mentioned in this guide refer to using the left mouse button unless stated otherwise.*



### PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the (1) door (bent) (2) hinges and latches (broken or loosened) (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.



### DANGER!

- Immediate risk of death/serious injury (irreversible)



### WARNING

- Potential risk of death/serious injury (irreversible)



### CAUTION

- Potential risk of minor injury (reversible)

### NOTICE

- Potential risk of damage to property (reversible)



*Merrychef®, eikon® and MenuConnect® are registered US trademarks of The Welbilt UK Ltd Company. Press&GO® and easyToUCH® are registered US trademarks of Convotherm®, a brand of The Welbilt UK Ltd Company.*

*All other company names and product names mentioned herein are trademarks or registered trademarks of their respective owners.*



### WARNING

**THIS IS A CLASS A PRODUCT. IN A DOMESTIC ENVIRONMENT THIS PRODUCT MAY CAUSE RADIO INTERFERENCE IN WHICH CASE THE USER MAY BE REQUIRED TO TAKE ADEQUATE MEASURES.**

The instructions outlined in this guide are intended to ensure the safety and long life of your Merrychef® eikon® oven.

## PLEASE READ THE FOLLOWING SAFETY INSTRUCTIONS CAREFULLY

INTRODUCTION	2
<b>SAFETY &amp; REGULATIONS</b>	
IMPORTANT SAFETY INSTRUCTIONS	4
PRECAUTIONS TO BE OBSERVED	6
SUITABLE COOKING UTENSILS	6
<b>PRODUCT DETAILS</b>	
MAIN FEATURES	7
TECHNICAL SPECIFICATIONS	8
Specifications	8
Serial Number (Rating Plate)	8
Compliances	8
INSTALLATION	10
Oven Location and Positioning	10
ELECTRICAL INSTALLATION	11
ELECTRICAL INSTALLATION GUIDE	12
Phase Loading	12
<b>OPERATION &amp; CONTROLS</b>	
QUICK START GUIDE: QUICK SERVICE OVEN	13
Start up	13
Using a Cooking Program	14
Screen Saver	14
OPERATING GUIDE: FULL SERVICE OVEN	15
easyToUCH® Main Menu & Keyboard Screen	15
Development Mode: Creating a Cooking Program	16
Press&GO®	17
Using a Cookbook Program	17
Changing the Oven Temperature	18
Viewing & Editing Programs	18
Adding a new Program Group	19
Move a Program within a Program Group	19
Adding a Program to a Program Group	20
Managing Program Groups	20
OVEN CONTROL SETTINGS	21
Oven Mode/Navigation Settings (A)	21
Language Options (B)	21
Oven Temperature Settings and Labels (C)	21
Recipe Counters (E)	22
Date and Time Settings (F)	22
Sound Levels (G)	22
Oven Timer (H)	22
USB Oven Programs (J)	23
Temperature Band (K)	23
Change Password (L)	23
Screen Saver (M)	23
<b>CLEANING &amp; MAINTENANCE</b>	
COOLING THE OVEN DOWN BEFORE CLEANING	24
Oven cool down	24
Preparing to clean the Oven	24
COLD OVEN CLEANING INSTRUCTIONS e4s	25
<b>FAULT FINDING</b>	
FAULT FINDING CHART	26
SERVICING	27

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances basic safety precautions should be followed, including the following:

**WARNING:** To reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on the Introduction page.
3. This appliance must be grounded. Connect only to a properly grounded outlet. See "ELECTRICAL INSTALLATION".
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. **WARNING:** Liquids or other foods must not be heated in sealed containers since they are liable to explode.
6. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapours in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
7. This appliance is not intended for use by children (see clause 31 for more details).
8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
9. **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of any cover which gives protection against exposure to microwave energy.
10. Do not cover or block any openings on the appliance including air vents/filters and

steam outlet.

11. Do not store this appliance outdoors. Do not use this product near water — for example, near a kitchen sink, in a wet basement, or near a swimming pool, and the like.
12. Do not immerse the cord or plug in water.
13. Keep the cord away from heated surfaces.
14. Do not let the cord hang over an edge of a table or counter.
15. Either:
  - i) When cleaning surfaces of door and oven that come together on closing the door, use only mild non-abrasive soaps, or detergents applied with a sponge or soft cloth.
  - ii) When separate cleaning instructions are provided, see door surface cleaning instructions.
16. To reduce risk of fire in the cavity:
  - i) When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
  - ii) Remove wire twist-ties from paper or plastic bags before placing bag in oven.
  - iii) If materials inside the oven should ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
  - iv) If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
  - v) Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
17. **WARNING:** Microwave heating of beverages can result in delayed eruptive boiling therefore care must be taken when handling the container.

### SAVE THESE INSTRUCTIONS

## IMPORTANT SAFETY INSTRUCTIONS

18. DO NOT operate using microwave only or combination function without food or liquid inside the oven as this may result in overheating and may cause damage.
19. Eggs in their shells and whole hard boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
20. NEVER remove the exterior of the oven.
21. NEVER remove any fixed internal parts of the oven.
22. NEVER tamper with the control panel, door, seals, or any other oven part.
23. DO NOT obstruct air vents/filters or steam outlet.
24. NEVER hang dish towels or cloths on any part of the oven.
25. WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
26. If the power cable is damaged in any way it MUST be replaced by an approved Service Agent.
27. When handling hot liquids, foods, and containers, care should be taken to avoid scalds and burns.
28. When heating liquids using microwave only or combination function, the contents should be stirred prior to heating to avoid eruptive boiling.
29. WARNING: The contents of feeding bottles and baby food jars must be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
30. Never use the oven to heat alcohol, e.g. brandy, rum, etc. Food containing alcohol can more easily catch fire if overheated. Observe caution and do not leave the oven unattended.
31. Never attempt to deep fry in the oven.
32. This appliance is not intended for use by children aged 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
33. Oven must not be operated without the air filter in place.
34. The minimum height of free space necessary above the top surface of the oven is 50mm (2").
35. Only use utensils that are suitable for use in microwave ovens.
36. Details for cleaning door seals, cavities and adjacent parts are provided in the Cleaning Section of this manual.
37. The oven should be cleaned regularly and any food deposits removed.
38. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
39. The appliance should not be cleaned with a water jet.

**SAVE THESE INSTRUCTIONS**

## PRECAUTIONS TO BE OBSERVED

1. Read this manual before using your oven.
2. As with all electrical appliances, it is wise to have the electrical connections inspected at least once a year.
3. The oven interior and door seals should be cleaned frequently following the instructions described in the 'Cleaning' section. Failure to do so could possibly result in a hazardous situation.
4. Switch off the oven at the end of all the cooking sessions for that day.
5. The oven should not be used to dry linen.
6. As with any cooking appliance, care should be taken to avoid combustion of the items within the oven.
7. Food in combustible plastic or paper containers should be transferred to a microwave/oven proof container to avoid the possibility of ignition.
8. Items should be unwrapped when using convection and combination functions.
9. Eggs in their shells and whole hard boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
10. Food with a skin, e.g. potatoes, apples, sausages, etc. should be pierced before heating.
11. Food should not be heated in a completely sealed container as the build-up of steam may cause it to explode.
12. Excess fat should be removed during 'roasting' and before lifting heavy containers from the oven.
13. In the event of glass breaking or shattering within the oven, ensure that food is totally free of glass particles. If in doubt, dispose of any food that was in the oven at the time of the breakage.
14. DO NOT attempt to operate the oven with: object caught in door, that does not close properly or damaged door, hinge, latch, sealing surface or without food in the oven.

### IF SMOKE IS OBSERVED:

- Switch off
- Isolate from the electrical supply
- Keep the door closed to stifle any flames

## SUITABLE COOKING UTENSILS

Manufacturer's instructions should be checked to determine the suitability of individual containers or utensils using each of the cooking functions. The following chart provides general guidelines:

Heat resistant containers		
Toughened glass Vitreous ceramics Earthenware (porcelain/crockery/china etc.)	✓ ✓ ✓	Do not use items with metallic decoration.
Metallic & Foil Trays		
Metallic trays DO NOT USE ANY OTHER METAL OR FOIL CONTAINERS	✓	Metallic trays may only be used when placed on the VITREOUS RACK in the oven cavity. Do not cook food directly on the vitreous enamel rack.
Plastic containers		
Dual-ovenable plastic containers	✓	(up to certain temperatures) are now available. Check manufacturer's instructions before use.
Disposables		
DO NOT USE Combustibles (paper/card etc.)	✗	
Other utensils		
Tie tags Cutlery Temperature probes	✗ ✗ ✗	No kitchen utensil should be left in food while it is cooking in the oven.

# MAIN FEATURES

## 1 ON/OFF SWITCH

When switched ON the easyToUCH® screen illuminates the oven controls.

*NOTE: Turning this switch OFF does not isolate the oven from the electricity supply.*

## 2 easyToUCH® SCREEN CONTROL PANEL

See 'OPERATION & CONTROLS' for details.

## 3 RATING PLATE

Located on the rear panel of the oven states the serial number, model type & electrical specifications.

## 4 USB port/Merrychef badge

A USB socket located under the 'Merrychef' logo allows changes to programs stored on the oven (See USB MenuConnect® User Manual, and 'OPERATION & CONTROLS' section of this manual, for details of updating oven programs).

## 5 AIR OUTLETS

Air used to cool internal components and steam from the cavity escape through the air outlet vents located on the rear of the oven. The air outlets must be kept free from obstruction and they will not allow microwave energy to escape into the environment.

## 6 AIR INLET FILTER

The air filter situated at the lower front of the oven is part of the ventilation system and must be kept free of obstruction and cleaned daily as described under 'CLEANING & MAINTENANCE'.

*NOTE: The oven will not operate without the air filter fitted.*

## 7 DOOR HANDLE

This is a rigid bar which is pulled downwards and away from the oven to open.

## 8 OVEN DOOR

This is a precision-made energy barrier with three microwave safety interlocks. The door must be kept clean (see 'CLEANING & MAINTENANCE') and should NOT be used to support heavy objects.

## 9 DOOR SEALS


These ensure a tight seal around the door. They should be kept clean and checked regularly for signs of damage. At the first sign of wear they should be replaced by a Merrychef approved Service Agent.

## 10 CONVECTION FAN, AIR DIFFUSER & CATALYTIC CONVERTOR

The convection fan must be kept clean and free of debris. Great care should be taken when cleaning this area of the oven noting the different oven requirements shown under 'CLEANING & MAINTENANCE' in this manual.

## 11 OVEN CAVITY

The oven cavity is constructed from stainless steel and must be kept clean by following the cleaning instructions in the 'CLEANING & MAINTENANCE' section of this manual.

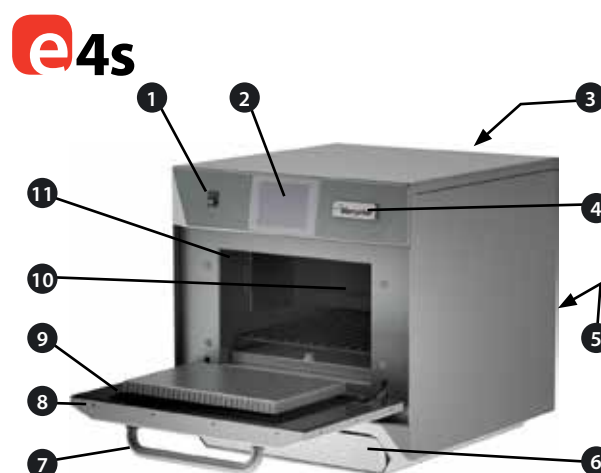


# TECHNICAL SPECIFICATIONS

## Specifications

Description	unit	e4s
Touch screen controls	programs	1024
Ambient operating temperature	°C/°F	<40/104
External HxWxD	mm	591x584x750
External HxWxD	inches	23.3x23.0x29.5
Internal HxWxD	mm	218x375x361
Internal HxWxD	inches	8.6x14.8x14.2
Cooking chamber	Ltr (cu.ins)	29.5 (1800)
Power output microwave	Watts	1800
Power output convection	kW	3.2
Power supply	Hz	50 or 60
Power supply	V	230 (50Hz), 208/240 or 220 (60Hz)
Power supply	kW	6.2
Unpackaged oven weight net	Kg (lbs)	86.3 (190)
Sound pressure level	dB(A)	<60

PRODUCT DETAILS

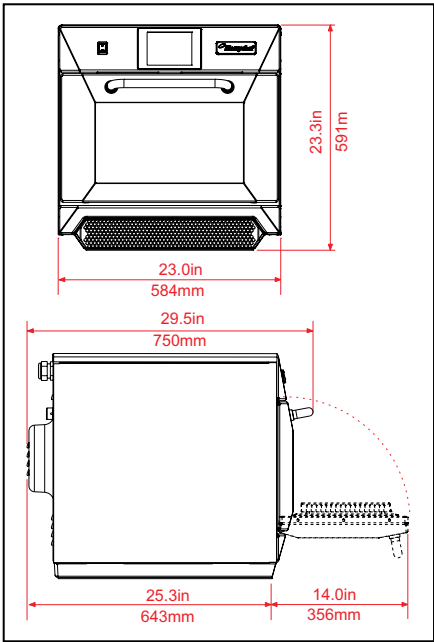

### Serial Number (Rating Plate)

Serial Number: YY MM SITE SERIAL

i.e. 10 06 2130 12345 (1006213012345)

Oven manufactured 2013 in June at Sheffield (UK), production number 12345.

Model Number: MODEL CONVECTION MICROWAVE VOLTAGE HERTZ LEAD PLUG  
COMMUNICATION VERSION CUSTOMER/ACCESSORY COUNTRY

i.e. e4s ST 30 5 H E U 1 GM EU (e4SST305HEU1GMEU)

Model e4s, 3200W, 1800W, 230V, 50Hz, L+N+E(4mm EU), 3-pin plug, USB, 1,  
General Market, European.

### Compliances

EU Directives

EMC 2004/108/EC

LVD 2006/95/EC

RoHS 2011/65/EU

MD 2006/42/EC





# EC Declaration of Conformity

## MANUFACTURER

AUTHORISED REPRESENTATIVE (BRAND HQ)	FACTORY
Welbilt UK Limited	Welbilt UK Limited
Ashbourne House	Provincial Park
The Guildway	Nether Lane
Old Portsmouth Road	Ecclesfield
Guildford	Sheffield
GU3 1LR	S35 9ZX
United Kingdom	United Kingdom

## EQUIPMENT DETAILS

Generic Model Numbers	eikon e4s
Description	Commercial Combination Microwave Oven

## DECLARATION OF CONFORMITY WITH DIRECTIVES AND STANDARDS

The manufacturer hereby declares that its commercial combination microwave ovens listed above comply with the following directives and standards.

## COMPLIANCE WITH DIRECTIVES

The commercial combination microwave ovens comply with the relevant provisions of the following European Directives:  
EMC 2004/108/EC      LVD 2006/95/EC      RoHS 2011/65/EU      MD 2006/42/EC

## HARMONISED STANDARDS APPLIED

The commercial combination microwave ovens comply with the relevant requirements of the following European standards:

- EN 60335-2-90:2006 +A1 (excluding Annex EE ship board requirements)
- EN 60335-1:2012
- EN 62233:2008
- EN 55014-2:2009 in accordance with Category IV requirements
  - Electrostatic discharge      IEC 61000-4-2:2008
  - Radiated RF interference      IEC 61000-4-3:2006
  - Fast transient common mode, AC port      IEC 61000-4-4:2004
  - Mains surge, AC port      IEC 61000-4-5:2005
  - RF current, common mode, AC port      IEC 61000-4-6:2008
  - Mains voltage dips & interruptions      IEC 61000-4-11:2004
  - Flicker      IEC 61000-3-11:2000
- EN 55011:2009 Classification: Class A, Group 2
  - Mains terminal disturbance voltage      Table 6
  - Radiated disturbance, magnetic field\*      Table 9
  - Radiated disturbance, electric field      Table 9
- AS/NZS CISPR 11
  - Radiated disturbance      CISPR 11:2011 Class A
  - Conducted disturbance      CISPR 11:2011 Class A

## QUALITY AND ENVIRONMENTAL MANAGEMENT

Welbilt UK Limited (Sheffield) employs a quality management system in accordance with EN ISO 9001:2008 and a certified environmental management system in accordance with EN ISO 14001.

# INSTALLATION

Check for obvious signs of transit damage.

If necessary, inform the freight company IMMEDIATELY.

Remove packing material and protective film from the oven and safely discard.

Included inside your oven:

**Model e4s Series:**

- Self-supporting Rack
- Vitreous Enamel Tray
- Cool Down Rack

## PRODUCT DETAILS

### OVEN LOCATION AND POSITIONING

Choose a site away from major heat sources.

DO NOT position so that hot air is drawn in from fryers, grills, griddles, etc.

A heat barrier to the height of the oven must be installed if sited next to a burner, stove or range.


Place the oven on a permanent nonslip/nonflammable flat surface that is LEVEL, STABLE and STRONG enough for the oven and contents.

Allow a minimum clearance (A) of 2 inches (50mm) around the oven for hot air to escape.

Allow sufficient clearance (B), in front of the oven for the door to open fully.

**The air intake is located at the lower front of the oven (1) and it is important that the airflow is as cool as possible and not preheated by other appliances such as burners, stoves, ranges, fryers, grills and griddles as this will deteriorate the life and performance of the oven.**

Do not affix labels/stickers to oven other than those applied or approved by the manufacturer.

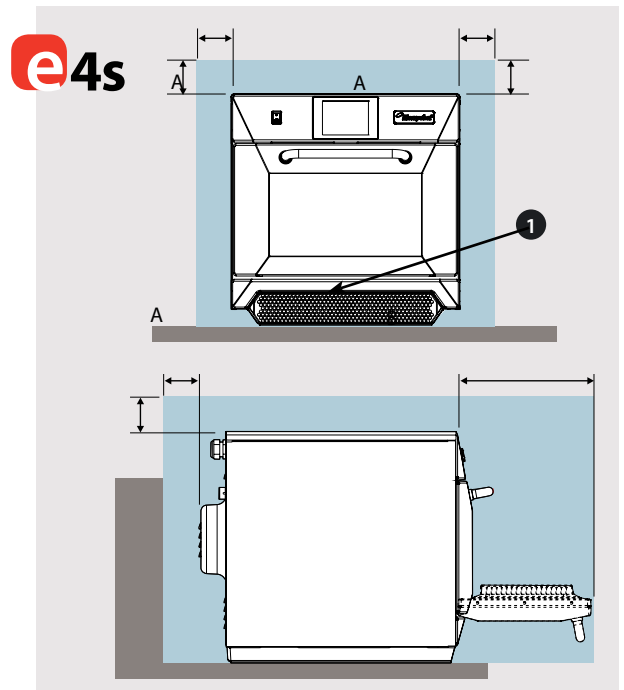

*The oven will not operate without the AIR FILTER correctly fitted in place.*

### HANDLING & STORAGE

When moving an oven always observe and follow national and local requirements for lifting and moving heavy objects. Do not use the oven door handle to lift oven.

When not in use, electrically disconnect the oven and store safely in a dry cool place, do not stack ovens.

# ELECTRICAL INSTALLATION



**DANGER!**  
THIS APPLIANCE MUST BE EARTHED.  
FAILURE TO DO SO MAY RESULT IN  
ELECTRIC SHOCK AND DEATH.

The oven must be connected to a separate electrical supply installed by a qualified and approved electrician.

A suitably rated isolating switch with a 3mm contact gap on all poles should be fitted for each oven installed.

Establishments with standard (Type 'B') circuit breakers are sensitive to 'surges' which occur on switching on freezers, refrigerators and other catering equipment, including microwave ovens. Because of this, we strongly recommend that a separate Type 'C' circuit breaker (designed specifically for this type of equipment) must be fitted. An individual, suitably rated circuit breaker should be fitted for each oven installed.

This equipment complies with EN61000-3-11, however, when connecting sensitive equipment to the same supply as the oven, the user should determine in consultation with the supply authority, if necessary, that a low impedance supply is used.

## SINGLE PHASE (1)

UK models are fitted with a Blue 32Amp Plug to IEC 60309 (EN 60309)

The Circuit Breaker should be rated at 40A (Type C).

## TWIN PHASE (2)

Twin Phase models should be connected as shown.

The Circuit Breaker should be rated at 20A/Phase (Type C).



**WARNING**  
HIGH LEAKAGE CURRENT EARTH  
CONNECTION IS ESSENTIAL.





## EQUIPOTENTIAL

An Equipotential Earth point is provided on the rear panel of the oven for independent Earth (GND) connection.

## POWER SUPPLY: EARTH LEAKAGE CIRCUIT BREAKERS

If the oven is connected to an Earth Leakage Circuit Breaker device, this should allow a minimum of 30 milliamperes earth current without interrupting the circuit.

If you are in any doubt about your electrical supply, seek the advice of a qualified electrician.

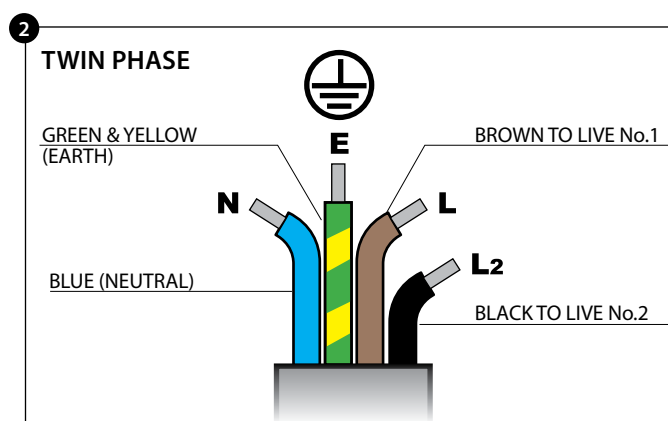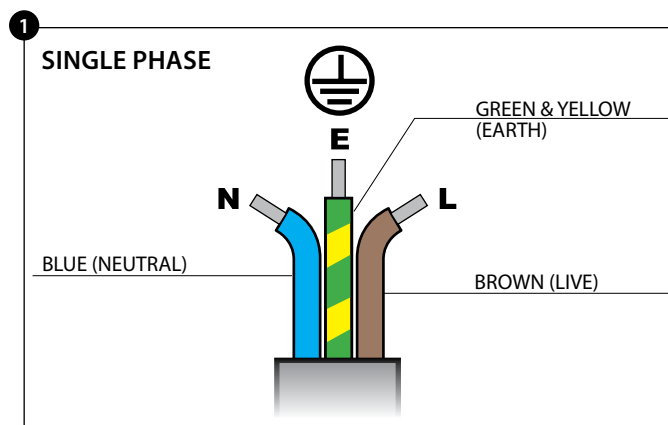

# ELECTRICAL INSTALLATION GUIDE



**DANGER!**  
THIS APPLIANCE MUST BE EARTHED.  
FAILURE TO DO SO MAY RESULT IN  
ELECTRIC SHOCK AND DEATH.

The oven must be connected to a separate electrical supply installed by a qualified and approved electrician.

A suitably rated isolating switch with a 3mm contact gap on all poles should be fitted for each oven installed.




**WARNING**  
HIGH LEAKAGE CURRENT.



## EQUIPOTENTIAL

An Equipotential Earth point is provided on the rear panel of the oven for independent Earth (GND) connection.

PRODUCT DETAILS

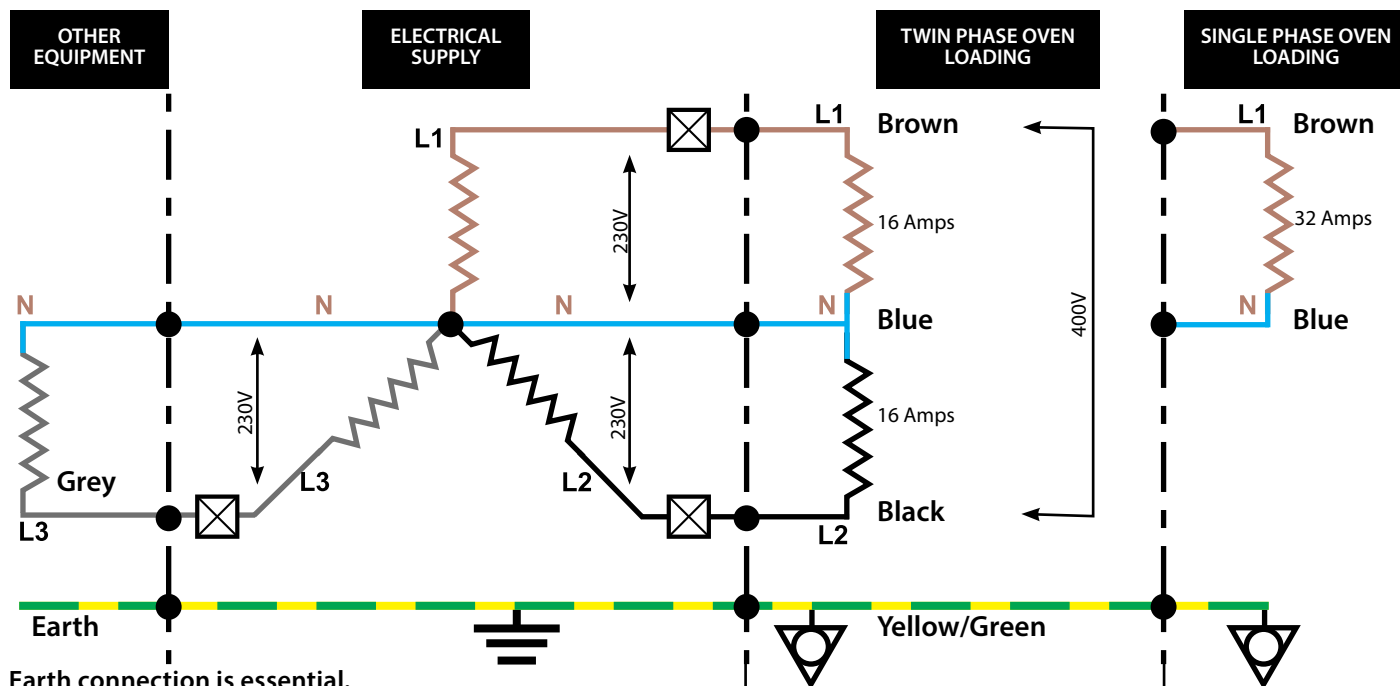

Phase Loading Diagram

## Phase Loading

Oven loading per phase is not equal therefore we recommend that other electrical equipment is connected to L3+ N.

### ⊠ Circuit Breakers

#### TWIN PHASE

Circuit Breakers should be rated at 20A per Phase and be Time Delay, Motor Start Type (European Type C).

#### SINGLE PHASE


Circuit Breakers should be rated at 40A per Phase and be Time Delay, Motor Start Type (European Type C).

#### Earth Leakage Circuit:

If the oven is connected to an Earth Leakage Circuit Breaker device, this should allow a minimum of 30 milliamps earth current without interrupting the circuit.

If you are in any doubt about your electrical supply, seek the advice of a qualified electrician.


#### RED

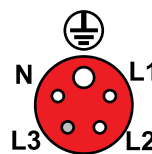

Rear view of plug  
Plug Type:  
Three Phase  
32Amp  
IEC 60309  
[EN60309]  
L1+ L2+ N+ E  
[L3 is not used]

20 Amp

#### BLUE

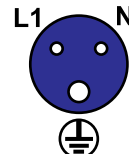

Rear view of plug  
Plug Type:  
Single Phase  
32Amp  
IEC 60309  
[EN60309]  
L1+N+E

40 Amp

# QUICK START GUIDE: QUICK SERVICE OVEN

The easyToUCH® screen display, layout and icons shown herein are for guidance purposes only and are not intended to be an exact representation of those supplied with the oven.

## START UP

1. Switch the oven on.


Make all the relevant safety checks and ensure the oven is clean and empty before pressing the oven switch down to activate the oven.

2. The easyToUCH® screen illuminates with the display briefly showing the serial number and oven data. If required, to keep the data on the screen, lightly tap the screen once to freeze the display. Tap again to continue.

3. When the oven is setup with two or more preheating temperatures a choice is displayed. Scroll arrows at the bottom of the screen indicate there are more temperature choices not shown on screen. If necessary, use the scroll arrows, then select the temperature required to start preheating the oven.

4. During preheating the display shows the progress as the oven heats up to the set temperature (to stop the oven heating touch the red 'X' symbol).

5. The oven is ready to use when the 'COOKBOOK' is displayed.

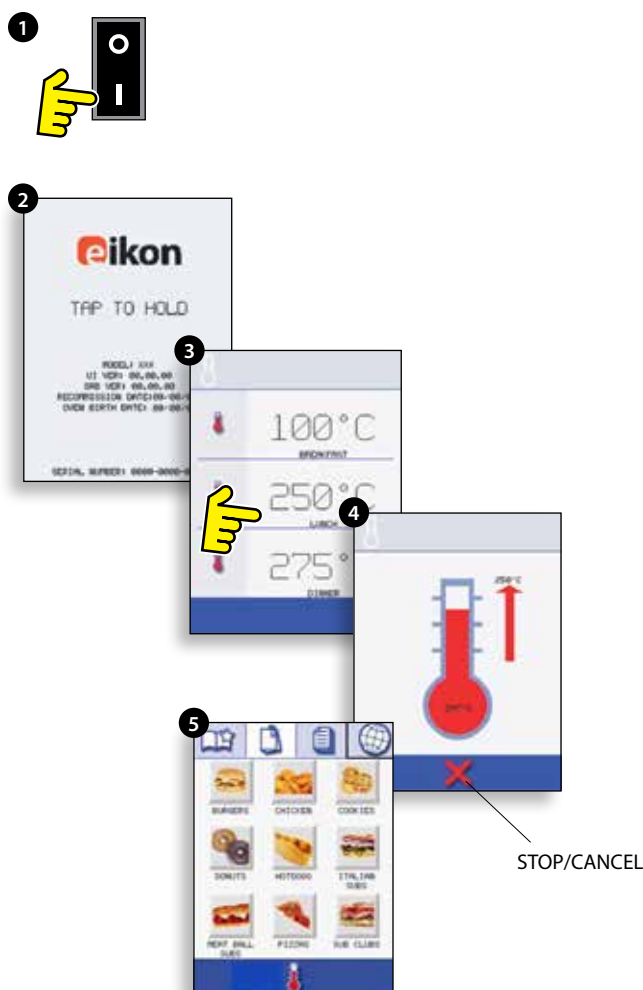

## COOKBOOK DISPLAY

MULTIPLE LANGUAGES INSTALLED  
DISPLAYS ALL COOKING PROGRAMS (optional)  
SHOWS PROGRAM GROUPS  
FAVOURITES (optional)

PROGRAM GROUP  
Each group contains a collection of cooking programs.

CHANGE OVEN TEMPERATURE (optional)



## USING A COOKING PROGRAM




**CAUTION**  
TAKING ALL THE NECESSARY  
PRECAUTIONS TO ENSURE YOU DO  
NOT BURN YOURSELF, OPEN THE  
OVEN DOOR TO PLACE THE FOOD  
INTO THE HOT OVEN AND CLOSE  
THE DOOR.

1. Select a program group, for example 'BURGERS', to display the individual cooking programs.
2. Select a cook program to start, for example '2 BURGERS'.
3. Follow instructions if displayed on the screen.
4. Touch the green tick to cook.

The cooking time counts down for each program stage.

5. When the program ends a red bar is displayed usually with an audible sound -- open the door or touch the red 'X' to return to the cook program.

*NOTE: Opening the oven door during cooking stops the cooking program and displays a warning. Closing the door allows the user to continue or cancel the cooking program.*

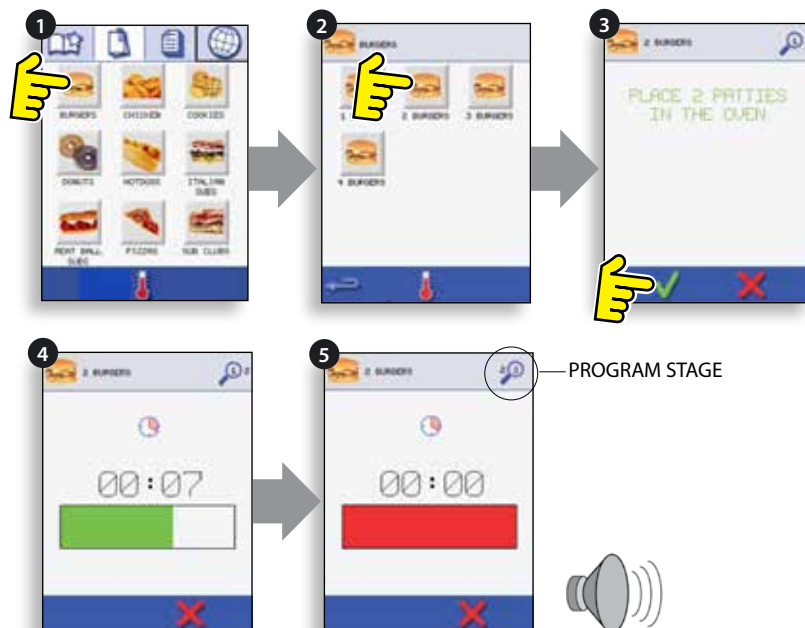

### AIR FILTER

#### IMPORTANT:

Clean the AIR FILTER (6) in the base of the oven every day and ensure that the air filter is in place prior to operating the oven.

See 'CLEANING & MAINTENANCE'.



### SCREEN SAVER


An active screen saver will mask the screen showing a moving image. To use the touchscreen, tap the screen to deactivate the screen saver.




## easyToUCH® MAIN MENU & KEYBOARD SCREEN

### MAIN MENU SCREEN:

1. DEVELOPMENT MODE enables multistage cooking programs to be developed, then stored under a name and symbol for reuse.
2. Press&GO® allows quick access to use the cooking programs that are already stored.
3. COOKBOOK contains the oven's cooking programs. It displays Favourites, Cooking Program Groups and a complete listing of all cooking programs available.
4. CLEANING/TEMP CHANGE allows the oven temperature to be changed and the oven to be prepared for cleaning with reminders displayed to assist during the cleaning process.
5. SETTINGS are used to control the oven settings and functions including time and language, loading cooking programs and for service and maintenance purposes.
6. KEYBOARD SCREEN is used to enter an authorised password to enter data for programs and may restrict operator access to some functions.

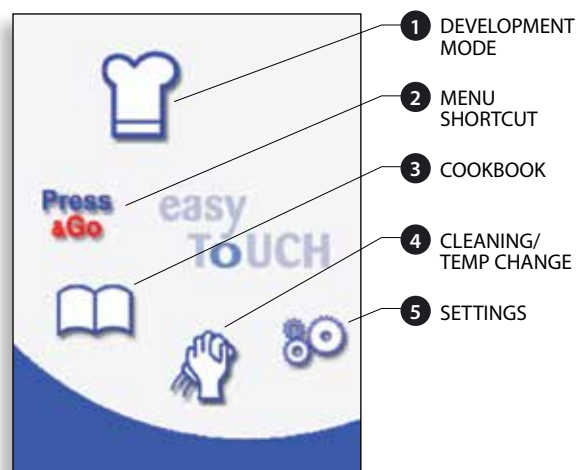

**i** For Program Names, Program Group Names and Passwords use 1-20 characters in 2 lines max.  
For Stage instructions use 1-54 characters in 5 lines max.

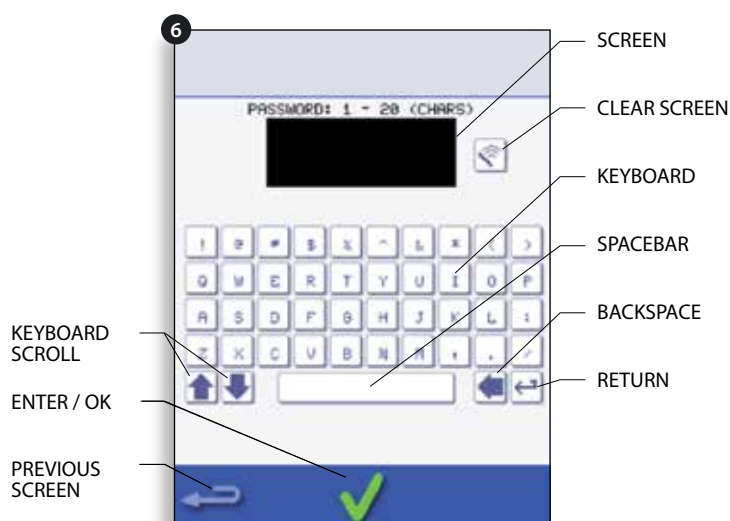



## DEVELOPMENT MODE: CREATING A COOKING PROGRAM

1. Select the 'chef's hat' symbol from the main menu to enter Development Mode.

### Enter stage 1 of the program

2. The temperature displays the set preheated oven temperature.

To increase or decrease the temperature required, select the temperature symbol (2), enter the temperature in the keypad within the limits displayed and select OK.

3. Select and set the cooking time up to a maximum of 10 minutes for each stage.

For example: Enter 110 (1 minute and 10 seconds).

4. Select and set the Microwave Power [0,5-100%]

5. Select and set a Fan Speed (if available) within the limits shown on screen.

6. Select the information icon to enter an instruction (optional). The instruction appears in the display at the beginning of that stage.

For example: 'Stage 1 place product in the oven'.

### Enter stage 2 of the program (optional)

7. Programs can have up to a maximum of 6 stages. Repeat the steps 2-6 from stage 1 above.





Example below: setting the cooking time (step 3):

To set the cooking time select the Time symbol.

Enter the cooking time on the pad.

Select OK to accept the time.

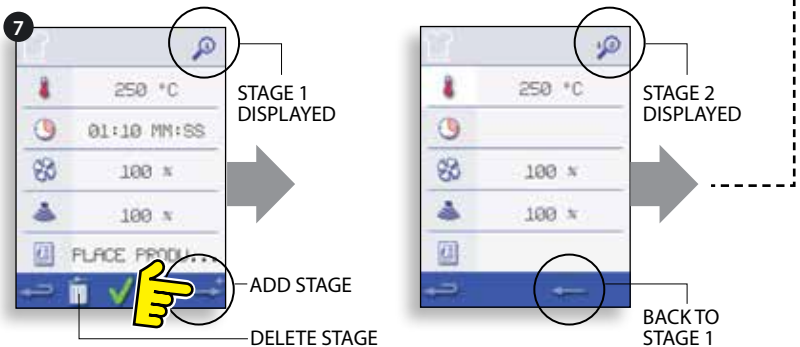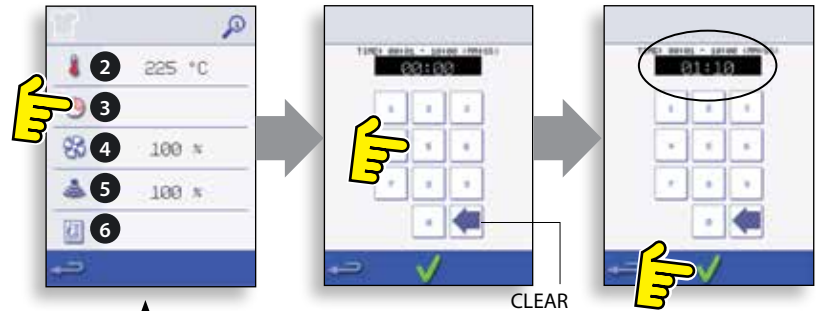

### Running and saving the program:

1. Select OK to confirm the program.



**WARNING**  
ENSURE PRODUCT IS IN THE OVEN  
AND ALL SAFETY PRECAUTIONS ARE  
FOLLOWED BEFORE RUNNING THE  
PROGRAM.

2. Run the program (optional).

If the results are not satisfactory, select the backspace, change the cooking settings and retest.


3. Select the save cookbook symbol to record the program to the cookbook.

4. Select the camera icon to open pictures.

5. Select a picture to represent the program (use the scroll arrows for more pictures).

6. Enter the name for the cooking program, using a maximum of 20 characters, for example, '1 BURGER', then select OK to save the program to the cookbook.

*NOTE: A green tick on a book indicates the program has been saved to the cookbook.*

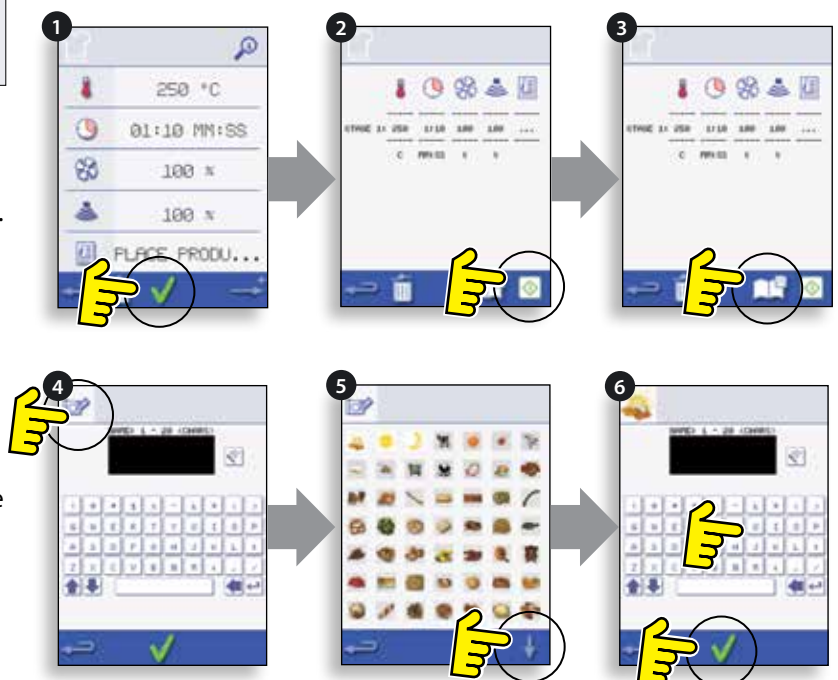




## Running a cooking program from the Press&GO® menu:

1. Select 'Press&GO' from the main menu screen.
2. Select the item required to cook.
3. The display shows the cooking time count down. The timer bar turns red to indicate the cooking cycle has finished.



## Choosing which cooking programs are shown in the 'Press&GO' menu screen:

1. After selecting 'Press&GO' from the main menu screen, select the 'EDIT' symbol.
2. Two lists are displayed, the 'Press&GO' menu items are shown in the upper list and the lower list shows other menu items which are available. Both lists can be scrolled up or down using the arrows on the extreme right.
3. Select an item, then choose whether to change its order within the menu or to remove it into the lower list.
4. Select an item to move into the upper list, making it available in the 'Press&GO' menu.
5. Select backspace to return to the menu screen when finished.

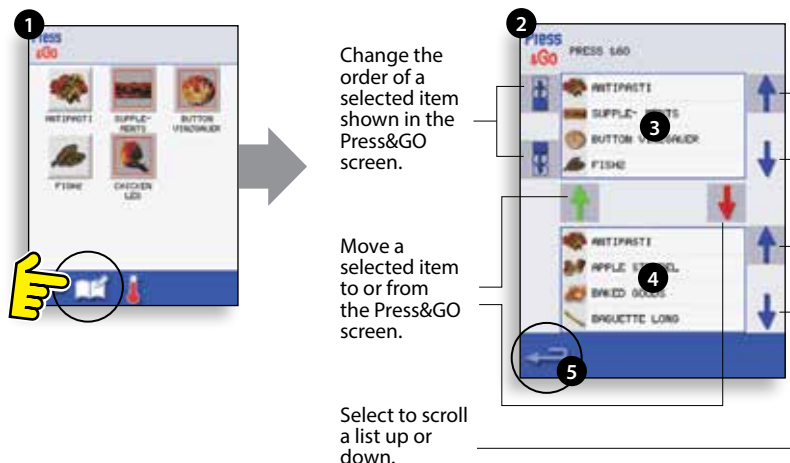

## USING A COOKBOOK PROGRAM


To find the required program in the cookbook.

**NOTICE**  
ENSURE THERE IS FOOD PRODUCT IN THE OVEN BEFORE STARTING A COOKING PROGRAM.

1. Select 'COOKBOOK' from the main menu screen.
2. Select the ALL MENUS symbol.
3. Use scroll up/down arrows to find the program.

*NOTE: If an image has a red line around it the oven temperature is set too high or too low for that recipe. See 'CHANGING THE OVEN TEMPERATURE'.*

Taking all the necessary precautions to ensure you do not burn yourself, place the food product into the hot oven cavity and close the door.

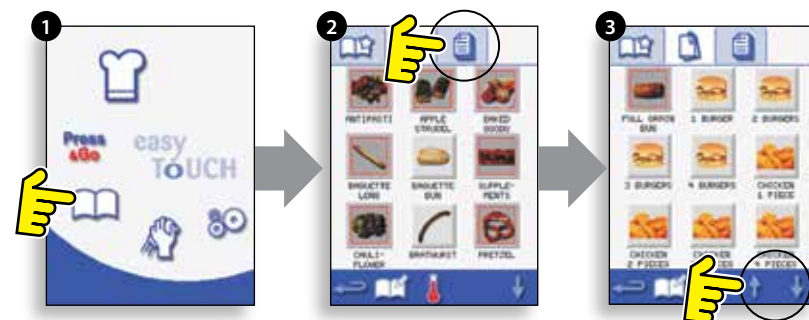

**WARNING**  
HOT SURFACE HAZARD

4. Select the required cooking program to start cooking. For example, '1 BURGER'.

5. The program either starts immediately displaying a countdown timer, or an instruction is displayed first. Follow the stage instruction and then select OK to start cooking. If the oven door is not opened within 30 seconds a warning message appears.

6. The cooking timer counts down to zero and makes a sound to indicate an operator action is required at the end of a cooking stage or the end of a cooking program.

Once the cooking program has finished, opening the oven door to remove the food returns the display to the 'COOKBOOK' screen.

*NOTE: Opening the oven door during cooking stops the cooking program and displays a warning. Closing the door allows the user to continue or cancel the cooking program.*

To check the oven temperature when cooking, lightly tap the temperature displayed, the oven cavity temperature is shown with an asterisk.




## CHANGING THE OVEN TEMPERATURE

1. Take note of the temperature required for the recipe and select OK.

2. Select the temperature symbol.

3. An asterisk next to the number indicates the present oven temperature, select the required oven temperature for the recipe. Once the oven is at the required temperature continue from selecting the 'COOKBOOK' in step 1.

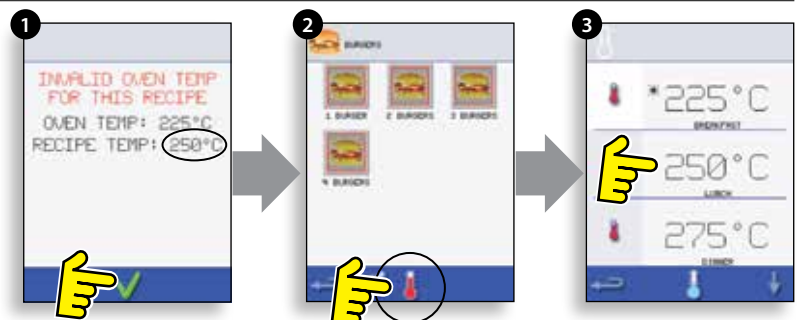

## VIEWING & EDITING PROGRAMS


1. Select 'COOKBOOK' from the main menu screen.

2. Select the ALL MENUS symbol.

3. Select 'EDIT COOKBOOK'.

4. Use the up/down scroll arrows on the right side of the screen to find the cooking program, for example '1 BURGER' and select the view/edit cooking program symbol.


5. View or adjust the program as required, see Development Mode for details.

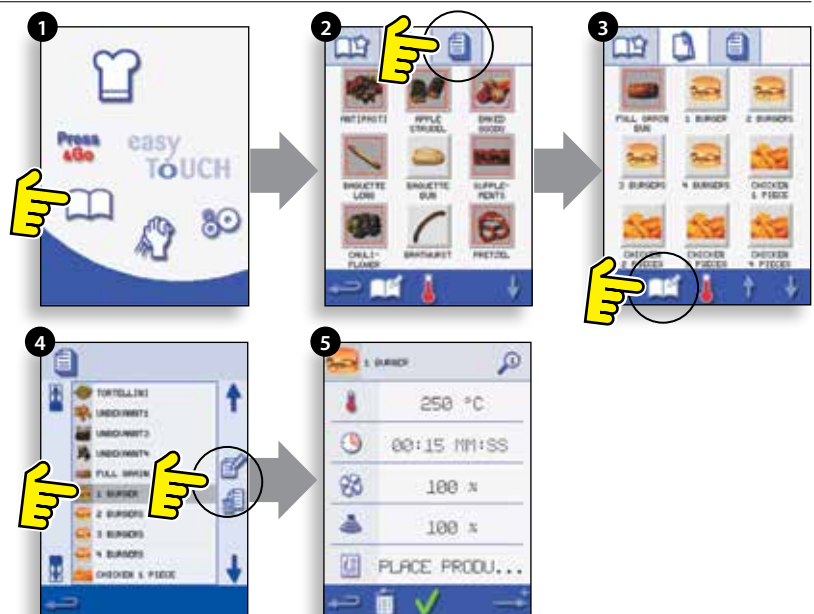

## ADDING A NEW PROGRAM GROUP

### To add a new program group:

1. Select 'COOKBOOK' from the main menu screen.
  2. Select 'EDIT COOKBOOK'.
  3. Select the 'ADD A NEW GROUP' symbol.
  4. Select the camera icon to open pictures.
  5. Select a picture to represent the program group (use the scroll arrows for more pictures).
  6. Enter a name for the new program group (max. 20 characters) and select OK to save the program group to the cookbook.
- Select backspace to return to the 'COOKBOOK'.

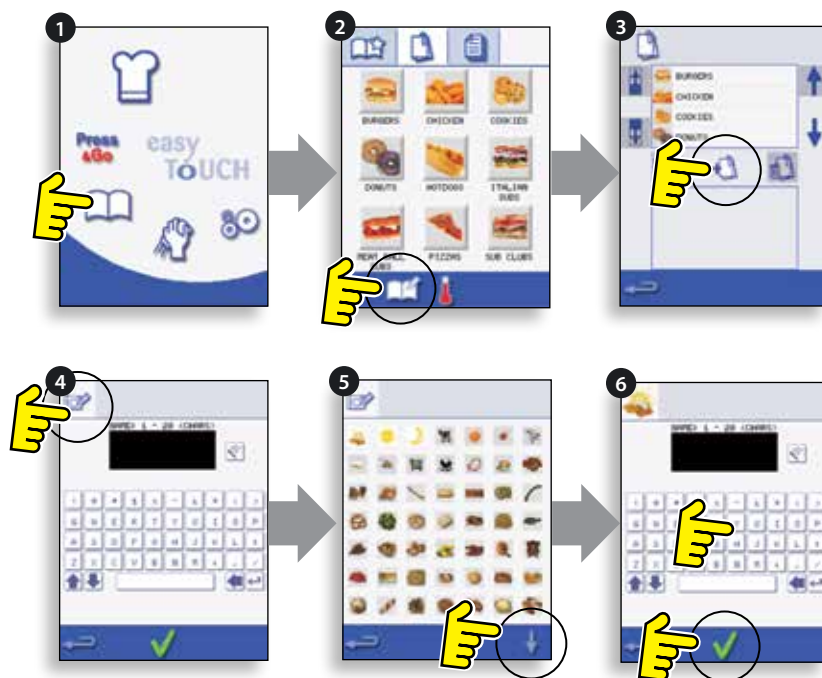


## MOVE A PROGRAM WITHIN A PROGRAM GROUP

Example: Moving the position of the '4 BURGERS' cooking program within the program group called 'BURGERS'.

1. Select 'COOKBOOK' from the main menu screen.
2. Select the 'BURGERS' program group.
3. Select 'EDIT COOKBOOK'.
4. Use the up/down scroll arrows on the right side of the upper part of the edit screen to view the cooking programs in the group.

Then select the cooking program to be moved ('4 BURGERS') and use the up/down arrows on the left side of the upper screen to move the selected program within the program group.

Select backspace to return to the 'COOKBOOK' screen.

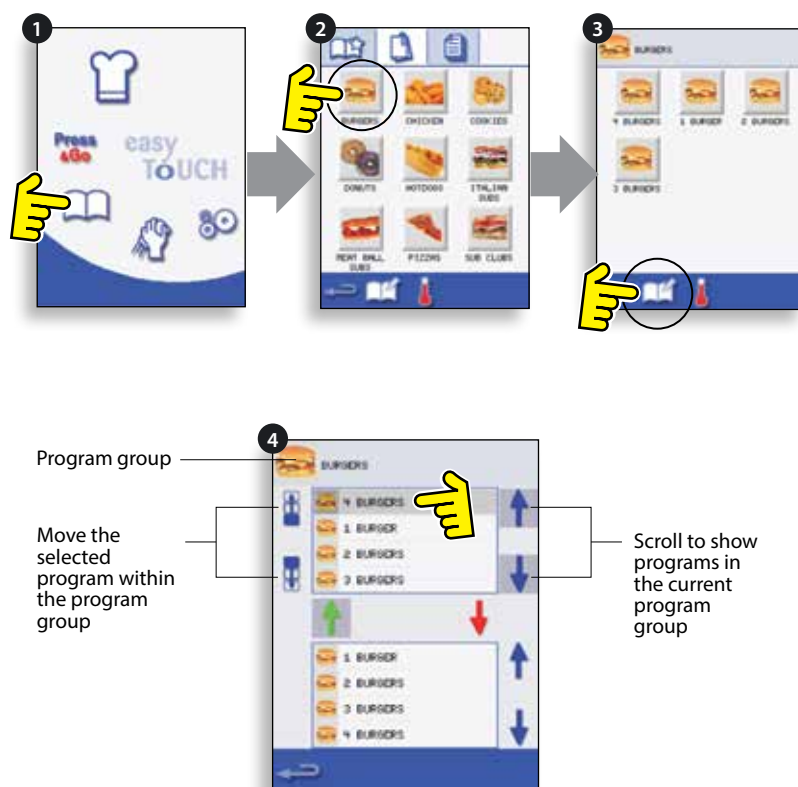


## ADDING A PROGRAM TO A PROGRAM GROUP

### To add a cooking program to an existing program group:

Example: Add program '4 BURGERS' to the program group 'BURGERS'.

1. Select 'COOKBOOK' from the main menu screen.
2. Select the 'BURGERS' program group.
3. Select 'EDIT COOKBOOK'.
4. In the lower part of the screen use the up/down scroll arrows on the right side to find and select the '4 BURGERS' cooking program.
5. Select the green UP arrow to add the '4 BURGERS' cooking program to the program group in the upper part of the screen, then select backspace to return to the cooking programs.
6. Select backspace again to return to the 'COOKBOOK'.

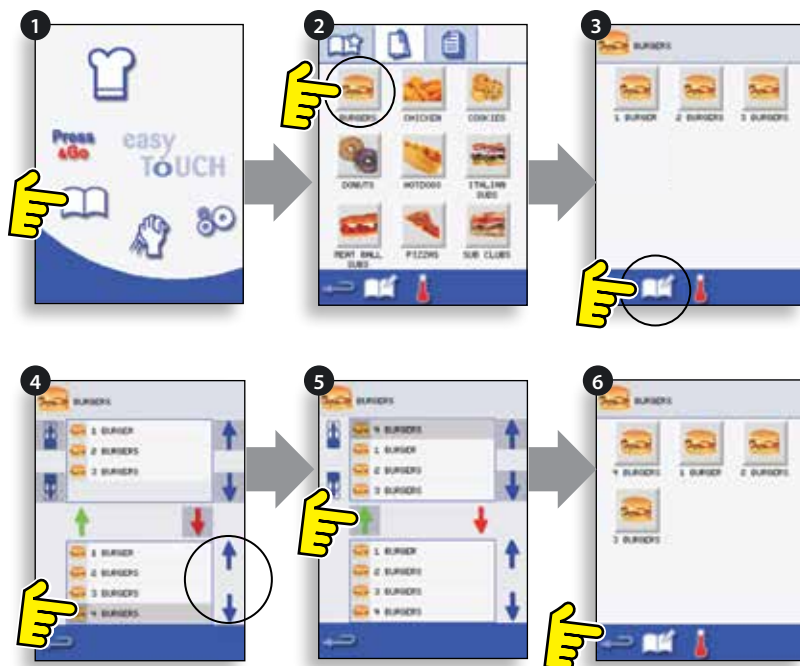

## MANAGING PROGRAM GROUPS

### To move a program position in a program group:

1. Select 'COOKBOOK' from the main menu screen.
2. Select 'EDIT COOKBOOK'.
3. Use the scroll arrows, up and down on the right side of the screen to locate all the program groups.
4. Select the program group to be moved and use the up and down arrows on the left side of the screen to move the selected program.
5. Select backspace to go back to the 'COOKBOOK'.



### To change the program group name:

Select the program group.

Select EDIT PROGRAM GROUP.


Enter the new name and select OK.

### To delete a program group:

Select the program group.

Select the DELETE program group symbol.

Select OK to delete the program group.

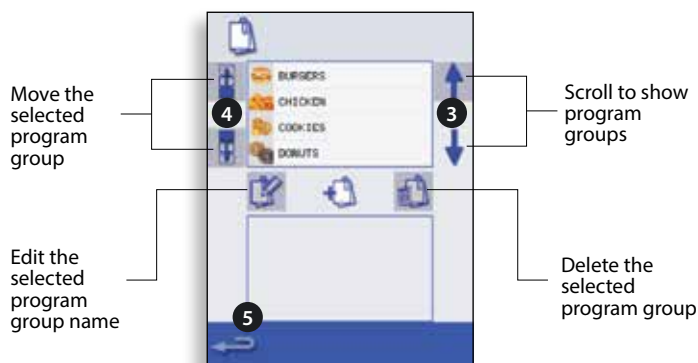



# OVEN CONTROL SETTINGS

1. Select the 'settings' symbol from the main menu screen.

2. Enter the password and select OK to display the Settings menu (3) comprising:

A. Oven mode/navigation settings.

B. Language options.

C. Oven temperature settings and labels.

D. Service information and error logs (password required).

E. Recipe counters.

F. Date & time settings.

G. Speaker sound levels.

H. Oven Timer (Temperature/ON/OFF).

J. USB program connection.

K. Temperature Band.

L. Change Settings/Service access passwords.

M. Screen saver.

When finished with a setting, select backspace to return to the main settings menu.

To exit the settings menu, select backspace, a prompt will be displayed to either 'SAVE' or 'DISCARD' any changed settings (4).

## Oven Mode/Navigation Settings (A)

Select the oven mode/navigation symbol (A) from the 'Settings' menu.

Select 'Quick Serve Mode' for cooking only, or 'Full Serve Mode' for cooking & development programs or 'Manual mode' to manually cook only via the 'Chef's hat' symbol.

Select 'Enable Settings' to display an 'unlock' symbol on the Quick Serve Mode screen to allow access to the 'Settings' menu.

## Language Options (B)

Select the 'Globe' symbol (B).

Select the checkbox of the required language/s from the list shown.

Select the 'Enable Globe' checkbox to display the 'Globe' icon in the menu screens to select a preset language.


## Oven Temperature Settings and Labels (C)

To change the oven preheat temperature, select the temperature symbol (C) to display the keypad. Enter the required temperature and select OK.

*NOTE: The temperature options screen is only displayed at start up when two or more temperatures are set above minimum.*

To change a temperature label, select the label to display the keyboard, enter the required label name and select OK.


**For Service Information & Error Logs (D) refer to 'SERVICING'.**

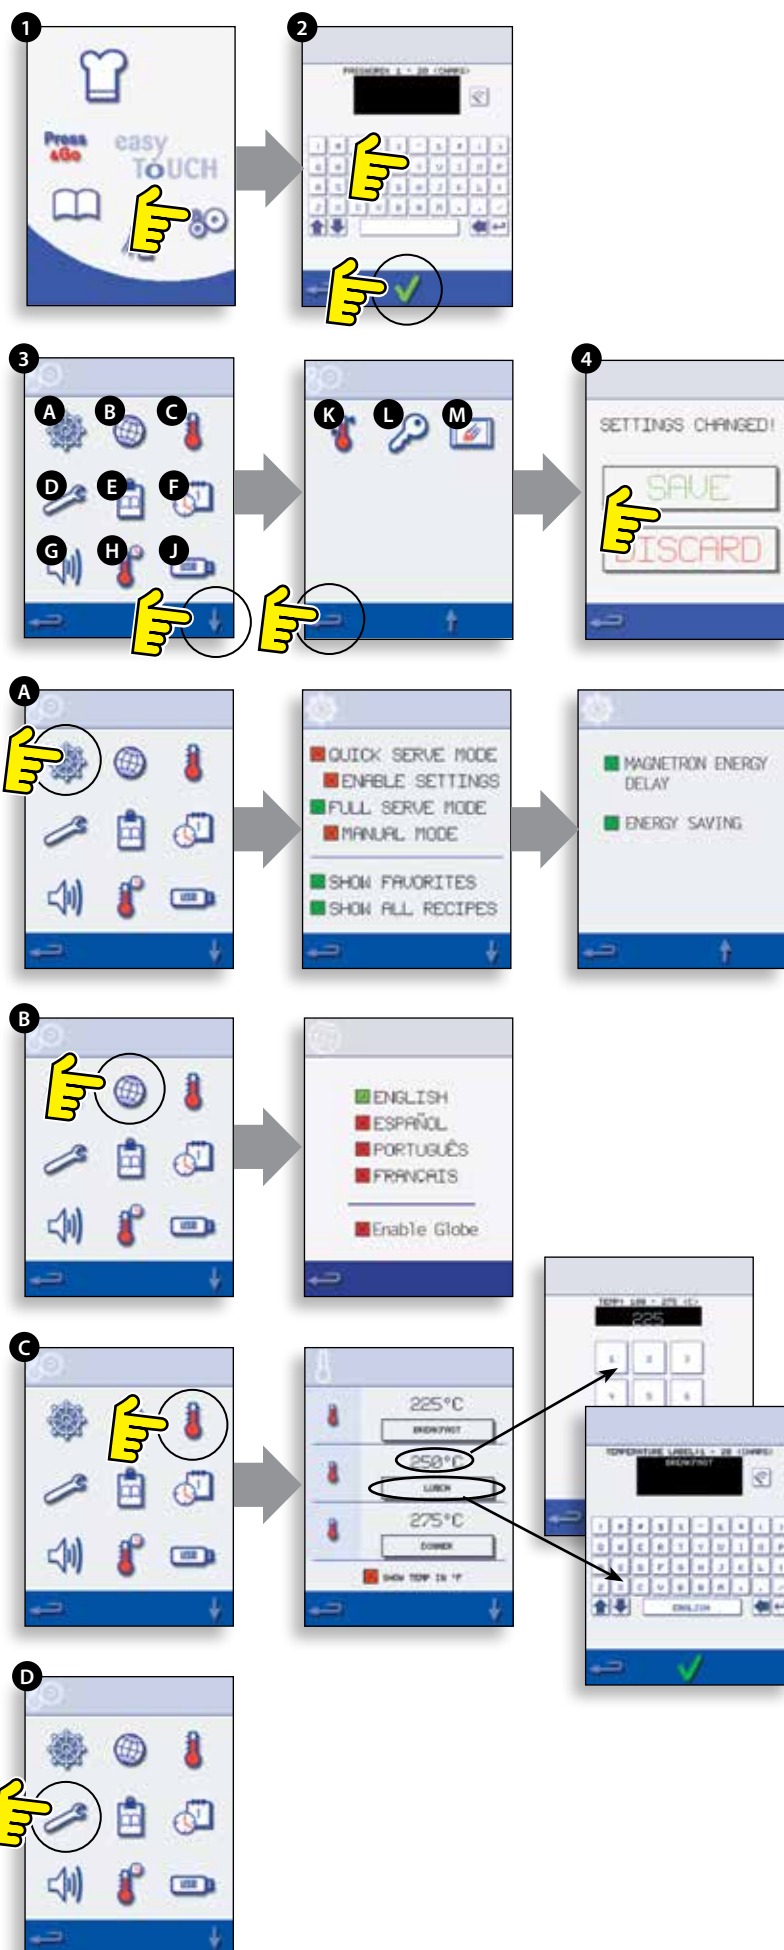

## Recipe Counters (E)

Select the clipboard symbol to display a listing of recipe counters.

If shown, use the arrows (bottom right) to scroll up and down the list.

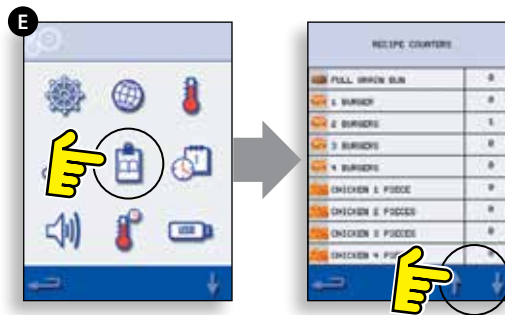

## Date and Time Settings (F)

Select the time/date symbol to display the setting options.

CHANGE THE DATE: Select 'MONTH', enter the correct month on the keypad and select OK.

Select 'DAY', enter the correct day on the keypad and select OK.

Select 'YEAR', enter the correct last two digits of the year on the keypad and select OK.


To display the month first, followed by the day and year, select the 'MM-DD-YY' checkbox.

*NOTE: The error logs are recorded using these settings.*

CHANGE THE TIME: Select 'HOUR', enter the correct hour on the keypad and select OK.

Select 'MIN', enter the correct minutes on the keypad and select OK.

Select the day name shown to cycle through to display the correct weekday.

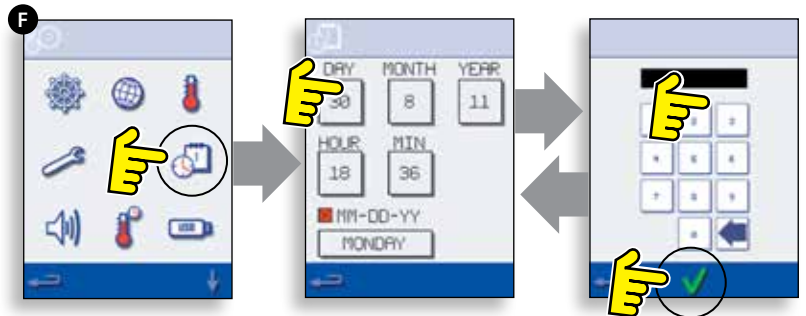


## Sound Levels (G)

Select the speaker symbol to adjust the volume level suitable for the environment from none (OFF) to the loudest (100%).

Select music note symbol to set LOW, MED or HIGH tone.

Select the keypad symbol to switch the sound ON or OFF when the touchscreen is pressed.

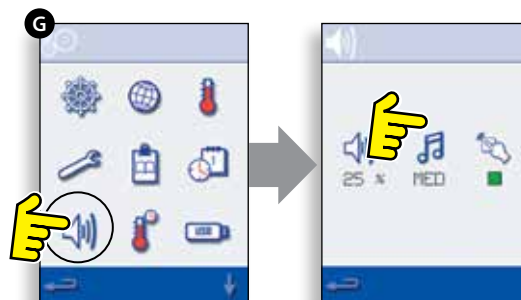

## Oven Timer (H)

Select the thermometer/timer symbol.

Select the 'Timer Enabled' checkbox (green tick).

Select a weekday using the up/down arrows.


Select an empty 'Time' box (maximum of 5 per day) or clear the box using the wipe symbol.

Enter the start time on the keypad and select OK.

Select an empty 'Temperature' box opposite the time box displaying the time just entered, or clear the box using the wipe symbol next to it.

Enter the cavity temperature required on the keypad and select OK.

*NOTE: You can also select zero to turn the heat off. Selecting the red circle symbol will switch the oven OFF.*

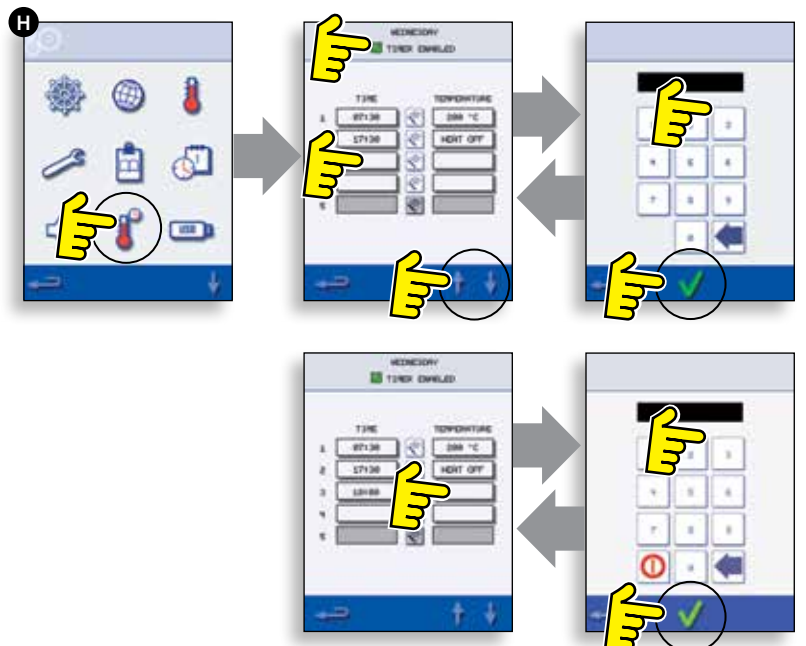

## USB Oven Programs (J)

**IMPORTANT:** Downloading from a USB will clear all the existing programs.

Check that the key has the correct number/code for the programs you want to load into the oven memory (1 'cbr' + 'autoupd.ate').

With the oven switched off, slide the Merrychef badge (oven front top right) upwards and insert the USB Memory Stick into the slot.


Switch the oven ON.

The files automatically download from the USB showing the progress and confirmation screens for the update.

On completion the oven displays the start up screen, then the thermometer symbol is displayed.

Remove the USB and keep it in a safe place.

Reposition the USB cover.

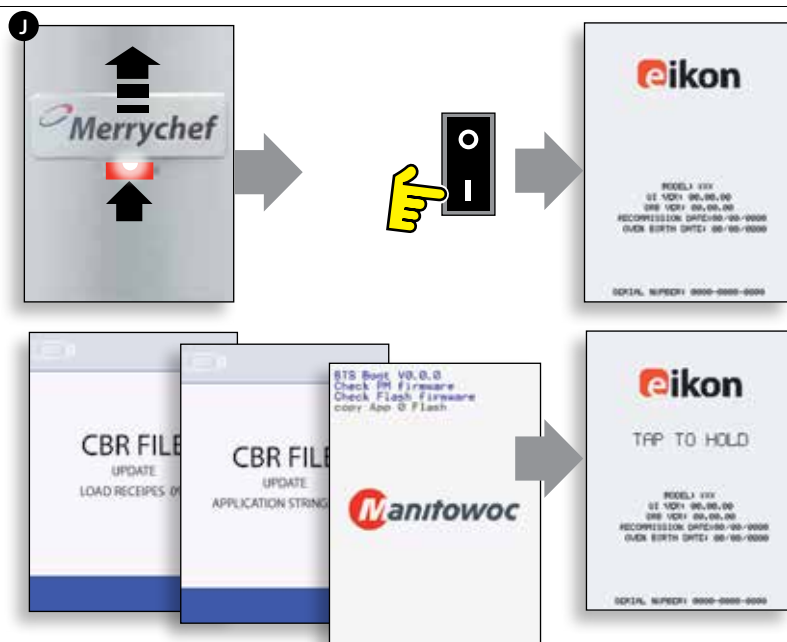


## Temperature Band (K)

Select the 'Temp Band' symbol at which the oven controls, e.g. 50°C.

Select the required temperature band checkbox, shown by a green tick.

*NOTE: Although the lowest practical 'Temp Band' should be used, if the set oven temperature falls by more than the selected 'Temp Band', the ready to cook mode and 'Temp Band' are deactivated until the oven reaches the preheat temperature.*

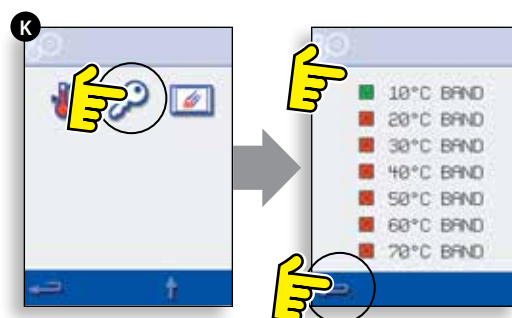

## Change Password (L)


Select the key symbol to change the oven passwords.

Select the oven Settings or Service symbol.

Enter the existing password and select OK to confirm.

Enter the new password, select OK.


Confirm new password, select OK.

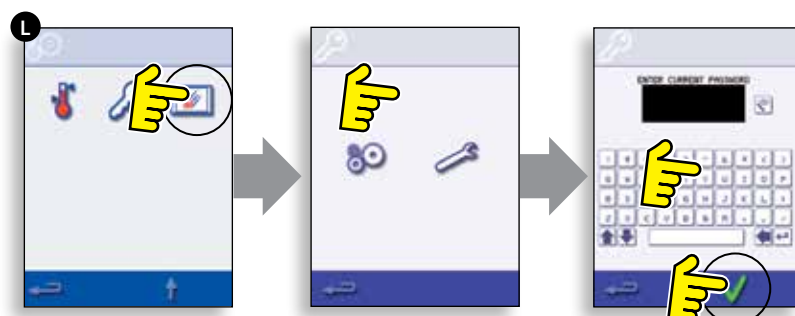

## Screen Saver (M)

Select the ENABLED checkbox to switch the screen saver ON or OFF.

Select the time box below to enter a time delay on the keypad from 1 to 60 minutes before the screen saver starts and select OK to confirm.

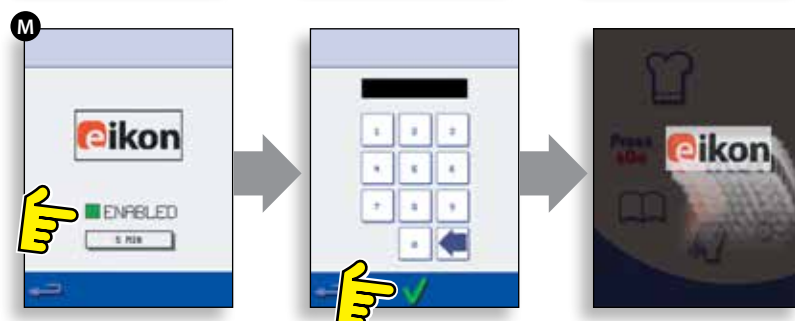

# COOLING THE OVEN DOWN BEFORE CLEANING

## OVEN COOL DOWN

**IMPORTANT:** The oven must be cooled down before the cleaning processes are carried out.

1. In Full Serve mode, select the CLEANING symbol from the main menu.

2. In Full or Quick Serve mode, select the blue thermometer symbol to disable heating and start the cooling cycle.


3. Taking all necessary precautions place a suitable container of ice or cold water (to speed up the cooling process) into the hot oven cavity. Select the OK symbol to continue.

4. The cooling progress is displayed and takes approximately 30 minutes.

*NOTE: To reduce the cool down time to about 15 minutes leave the oven door open slightly during the cooling process (4\*).*

5. Once the cooling process is complete, carefully remove the cool down pan. The pan and water maybe hot so an oven cloth or gloves should be used.

6. The oven is now ready for cleaning. Select OK on the screen after completing each stage.

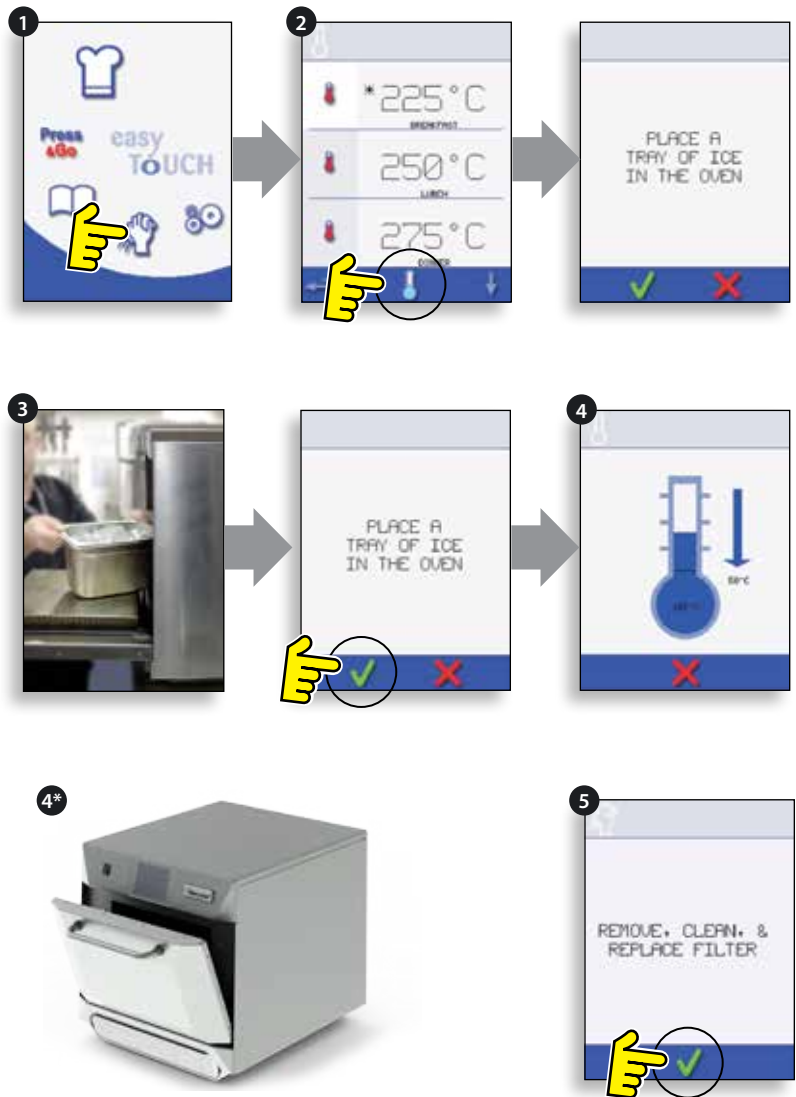

## PREPARING TO CLEAN THE OVEN

For the oven to operate at peak efficiency, the cavity, door, air filter and grease filter must be kept clean.

A daily cleaning routine will ensure that you comply with the required hygiene standards and will help to maintain and prolong the efficiency of your oven.

## EQUIPMENT REQUIRED (not supplied)

- Merrychef® approved oven cleaner
- Merrychef® approved oven protector
- Heat proof gloves
- Protective rubber gloves
- Non-abrasive nylon scrub pad
- Cleaning towel and cloths
- Eye protection
- Dust mask (optional).



**CAUTION**  
WEAR PROTECTIVE RUBBER GLOVES  
WHEN CLEANING THE OVEN.

### NOTICE

**DO NOT USE CAUSTIC CLEANERS ON ANY PART OF THE OVEN OR OVEN CAVITY AS IT WILL CAUSE PERMANENT DAMAGE TO THE CATALYTIC CONVERTERS.**





# COLD OVEN CLEANING INSTRUCTIONS

Complete COOL DOWN procedure and allow the oven and accessories to cool before commencing cleaning.

## NOTICE

**DO NOT USE TOOLS.  
NEVER USE SHARP IMPLEMENTS OR HARSH  
ABRASIVES ON ANY PART OF THE OVEN.**

## REMOVE & CLEAN OVEN PARTS

1. Switch off the oven.
2. Remove the air filter at the base of the oven.
3. Open the oven door and remove the rear diffuser plate and any cooking trays/racks from the cavity.
4. Wash all parts in warm soapy water. Wash off using a clean cloth and plenty of clean, warm water. Ensure all components are dry before re-fitting them.
5. Dry using a fresh, clean cloth.

## CLEAN THE OVEN

1. Remove any spillages with suitable cloth/paper towel.

Use a dry clean brush to remove any food particles from between the oven floor and the inside of the front door.

2. Wear protective rubber gloves and protective glasses following manufacturers recommendations related to Personal Protective Equipment. Carefully spray Merrychef® approved oven cleaner onto all the internal surfaces of the oven except the door seal (X).

**DO NOT spray directly into the fan opening at the rear inside of the oven.**

3. For difficult areas, leave to soak for 10 minutes with the oven door open.

Use a non-abrasive nylon scrub pad/sponge to clean the cavity, roof and the inside of the door. Do not scrub the door seal or use metallic scourers.

4. Wash off using a clean cloth and plenty of clean warm water and dry using a fresh clean cloth or paper towel. Ensure all components are dry before re-fitting them.

5. Replace all the cleaned oven parts.

6. Close the oven door and wipe the outside of the oven with a damp cloth.

## NOTICE

**DO NOT USE THE OVEN WITHOUT  
A CLEAN AIR FILTER IN PLACE.**

7. Now press the green tick.

## APPLY OVEN PROTECTOR

1. Only apply to a clean oven. Spray Merrychef® approved oven protector onto a sponge.
2. Spread oven protector lightly onto all internal surfaces of the oven avoiding the door seal, cooking surfaces, fan inlets and outlets.
3. Close the door and switch on the oven. If the air filter has not been replaced the touch screen will display a warning. Replace the air filter and then press the green tick.
4. Preheat the oven. Once the oven has reached operating temperature it will take about 30 minutes to cure the oven protector.

*NOTE: The oven protector turns light brown when cured.*


1



2




3

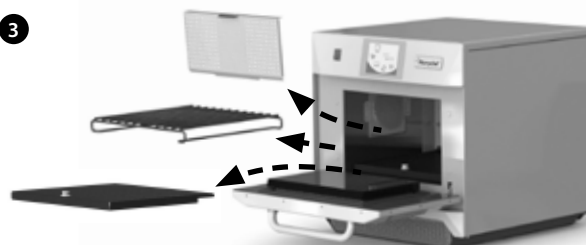

1



2

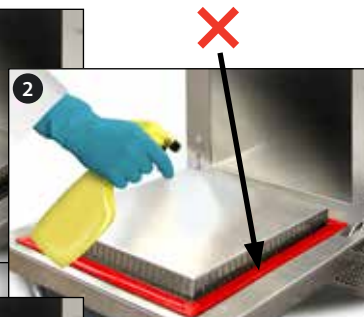

3



4




1



2



3

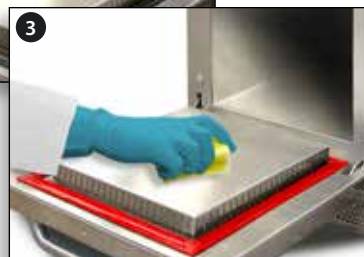

# FAULT FINDING CHART

Although every effort is made to ensure your oven will continue to perform to a high standard, please check the chart to see if the problem can be easily resolved before contacting your service agent.

PROBLEM	POSSIBLE CAUSE	REMEDY
The oven does not work and the display screen is blank	The oven has no power	Check if there is a power cut. Check the isolator switch is ON or the oven is plugged in correctly. Check the oven switch is ON.
Some screen controls do not work	Unauthorised access	Contact the authorised user.
Display shows a warning message	Details are shown on screen	Follow the instructions displayed.
The oven does not cook the food correctly	Oven not clean Food not at correct temperature Modified or wrong program selected Food wrapped Food removed early	Clean the oven (see 'CLEANING'). Use the correct cooking program. Unwrap food for non-microwave cooking. Check all the cooking stages have been followed correctly.
The oven does not finish cooking	Warning message displayed Oven door opened No air filter or incorrectly fitted Oven overheating	Close oven door. Refit air filter. Allow the oven to cool down. Check and remove any restrictions around the air vents.
Display shows an error code	Oven malfunction	Note the error code and contact your service agent.

# SERVICING

Approved Service Agent:

## Correct disposal of this product (Waste Electrical & Electronic Equipment)



Applicable in the European Union and other European countries with separate collection systems.

This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



Ashbourne House,

The Guildway, Old Portsmouth Road,

Guildford, GU3 1LR

Tel: +44(0)1483 464900

Fax: +44(0)1483 464905

[www.merrychef.com](http://www.merrychef.com)

© 2019 Welbilt UK Ltd . All rights reserved.

Continuing product improvement may necessitate change of specifications without notice.